

# SLS Series

QTY	FIG. NO.	PART NO.	DESCRIPTION	PRICE	SLS 0	SLS 1	SLS 2	SLS 3	SLS 4	SLS 5
1	911	0401	brake nut	1.25	X	X				
1	911	0402	brake nut	1.90			X	X	X	
1	911	0403	brake nut	2.00			X	X	X	X
2	911	0404	brake disc	.40	X	X				
2	911	0405	brake disc	.65			X	X	X	
2	911	0406	brake disc	.70						X
3	911	0407	brake pin	.60	X	X				
3	911	0408	brake pin	.65			X			
3	911	0409	brake pin	.65				X	X	
3	911	0410	brake pin	.65						X
4	911	0411	spool	8.00	X					
4	911	0412	spool	8.00		X				
4	911	0413	spool	8.25			X			
4	911	0414	spool	8.50				X		
4	911	0415	spool	8.75					X	
4	911	0416	spool	8.95						X
5	911	0417	plane wheel	.25	X	X				
5	911	0418	plane wheel	.25			X			
5	911	0419	plane wheel	.25				X	X	
5	911	0420	plane wheel	.25						X
6	911	0421	axle	2.25	X					
6	911	0422	axle	2.25		X				
6	911	0423	axle	2.55			X			
6	911	0424	axle	2.90				X		
6	911	0425	axle	3.00					X	
6	911	0426	axle	3.00						X
7	911	0427	flange	5.95	X					
7	911	0428	flange	5.95		X				
7	911	0429	flange	6.00			X			
7	911	0430	flange	6.25				X		
7	911	0431	flange	6.50					X	
7	911	0432	flange	6.75						X
8	911	0433	ball arm	3.15	X	X				
8	911	0434	ball arm	3.45			X			
8	911	0435	ball arm	3.55				X		
8	911	0436	ball arm	3.75					X	
8	911	0437	ball arm	3.95						X
9	911	0438	changing spring	.35	X	X				
9	911	0439	changing spring	.35			X	X	X	
10	911	0440	stop lever	1.35	X					
10	911	0441	stop lever	1.55		X				
10	911	0442	stop lever	1.80			X			
10	911	0443	stop lever	1.80				X		
10	911	0444	stop lever	1.80					X	
11	911	0445	screw	.30	X	X				
11	911	0446	screw	.30			X	X	X	
12	911	0447	cover	.35	X					
12	911	0448	cover	.35		X				
12	911	0449	cover	.35			X			
12	911	0450	cover	.35				X		
12	911	0451	cover	.35					X	
13	911	0452	screw	.55	X	X	X	X	X	
14	911	0453	half round screw	.25	X	X	X	X	X	
14	911	0454	half round screw	.25						X
15	911	0455	line guide	.70	X	X	X			
15	911	0456	line guide	.75				X	X	
15	911	0457	line guide	.90						X
16	911	0458	line guide cap	.70			X			
17	911	0459	angle lever	1.00	X	X				
17	911	0460	angle lever	1.35			X			
17	911	0461	angle lever	1.50				X		
17	911	0462	angle lever	1.60					X	
17	911	0463	angle lever	1.70						X
18	911	0464	spring ring	.25	X	X	X			
18	911	0465	spring ring	.25				X	X	
19	911	0466	ball arm	.35	X	X	X			
20	911	0467	bearing screw	.35	X	X				
20	911	0468	bearing screw	.35			X			
20	911	0469	bearing screw	.40				X	X	
20	911	0470	bearing screw	.40						X
21	911	0471	bearing disc	.35			X			
22	911	0472	cover	.30	X	X				
22	911	0473	cover	.30			X			
22	911	0474	cover	.35				X		
22	911	0475	cover	.35					X	
22	911	0476	cover	.60						X
23	911	0477	changing spring	.30	X	X				
23	911	0478	changing spring	.30			X			
23	911	0479	changing spring	.30				X	X	
23	911	0480	changing spring	.30						X
24	911	0481	changing spring	.30	X	X				
24	911	0482	changing spring	.30			X	X		
24	911	0483	changing spring	.30					X	
24	911	0484	changing spring	.30						X
25	911	0485	washer	.25	X	X				
25	911	0486	washer	.25			X	X	X	
25	911	0487	washer	.25						X
26	911	0488	stop lever	.65	X	X				
26	911	0489	stop lever	.95			X			
26	911	0490	stop lever	.95				X		
26	911	0491	stop lever	1.10					X	
26	911	0492	stop lever	1.25						X
27	911	0493	lug screw	.30	X	X				
27	911	0494	lug screw	.40			X	X		
27	911	0495	lug screw	.50					X	X
28	911	0496	excenter bolt	1.20	X					
28	911	0497	excenter bolt	1.20		X				
28	911	0498	excenter bolt	1.65			X			
28	911	0499	excenter bolt	1.80				X		
28	911	0500	excenter bolt	2.00					X	
28	911	0501	excenter bolt	2.25						X

QTY	FIG. NO.	PART NO.	DESCRIPTION	PRICE	SLS 0	SLS 1	SLS 2	SLS 3	SLS 4	SLS 5
29	911	0502	housing	6.95	X					
29	911	0503	housing	6.95		X				
29	911	0504	housing	7.00			X			
29	911	0505	housing	7.25				X		
29	911	0506	housing	7.50					X	
29	911	0507	housing	7.75						X
30	911	0508	safety plate	.30			X			
31	911	0509	driving wheel	2.25	X	X				
31	911	0510	driving wheel	2.45			X			
31	911	0511	driving wheel	2.50				X		
31	911	0512	driving wheel	2.75					X	
31	911	0513	driving wheel	2.95						X
32	911	0514	guide ball	.55	X	X				
32	911	0515	guide ball	.70			X			
33	911	0516	washer	.25	X	X				
33	911	0517	washer	.25			X	X	X	X
34	911	0518	sliding pin	.25	X	X				
34	911	0519	sliding pin	.25			X			
35	911	0520	cover	2.10	X					
35	911	0521	cover	2.10		X				
35	911	0522	cover	2.15			X			
35	911	0523	cover	2.25				X		
35	911	0524	cover	2.50					X	
35	911	0525	cover	2.75						X
36	911	0526	half round screw	.25	X	X				
36	911	0527	half round screw	.25			X	X	X	
36	911	0528	half round screw	.25						X
37	911	0529	lever for anti-reverse	.55	X					
37	911	0530	lever for anti-reverse	.55		X				
37	911	0531	lever for anti-reverse	.85			X	X		
37	911	0532	lever for anti-reverse	.85					X	
37	911	0533	lever for anti-reverse	.90						X
38	911	0534	spring ring	.25	X	X	X	X		
38	911	0535	spring ring	.25					X	X
39	911	0536	half round screw	.25	X	X	X	X		
39	911	0537	half round screw	.25						X
40	911	0538	crank arm	2.95	X	X				
40	911	0539	crank arm	2.95			X			
40	911	0540	crank arm	3.00				X	X	
40	911	0541	crank arm	3.25						X
41	911	0542	washer	.25	X	X				
41	911	0543	washer	.25			X	X	X	X
42	911	0544	screw	.70	X	X				
42	911	0545	screw	.85			X	X	X	X
43	911	0546	click ball	.25				X	X	X
44	911	0547	spring	.25				X	X	X
45	911	0548	ball bearing	2.50	X	X				
45	911	0549	ball bearing	2.60			X			
45	911	0550	ball bearing	2.70				X	X	
45	911	0551	ball bearing	2.95						X
46	911	0552	hexagon nut	.55	X	X				
46	911	0553	hexagon nut	.55				X		
46	911	0554	hexagon nut	.55					X	
46	911	0555	hexagon nut	.75						X
47	911	0556	spindle	.25				X	X	
47	911	0557	spindle	.25						X
48	911	0558	crank nut	.35				X		
48	911	0559	crank nut	.35					X	
49	911	0560	bearing disc	.25				X	X	
50	911	0561	ratchet wheel	.95	X	X				
50	911	0562	ratchet wheel	.95			X			
50	911	0563	ratchet wheel	1.00				X		
50	911	0564	ratchet wheel	1.00					X	
51	911	0565	bushing	.55	X	X				
51	911	0566	bushing	.55			X			
51	911	0567	bushing	.65				X		
51	911	0568	bushing	.80					X	
52	911	0569	half round screw	.20				X	X	X
53	911	0570	plate	.40					X	
53	911	0571	plate	.55						X
53	911	0572	plate	.65						X
54	911	0573	pinion	2.25	X					
54	911	0574	pinion	2.30		X				
54	911	0575	pinion	2.85				X		
54	911	0576	pinion	3.00					X	
54	911	0577	pinion	* 3.25						X
55	911	0578	tooth wheel	.90				X		
55	911	0579	tooth wheel	1.10					X	
55	911	0580	tooth wheel	1.20						X
56	911	0581	guide piece	.70				X		
56	911	0582	guide piece	.90					X	
56	911	0583	guide piece	1.00						X
57	911	0584	screw	.20				X	X	
57	911	0585	screw	.20						X
58	911	0586	plane wheel	.40					X	
58	911	0587	plane wheel	.50						X
59	911	0588	ball arm screw	.90						X
60	911	0589	side spring	.35	X	X				
61	911	0590	oscillating slider	.55	X	X				
62	911	0591	snap ring	.35	X	X				
63	911	0592	back stop	1.20	X	X				
64	911	0593	screw	.25	X	X				