



QTY	FIG. NO.	PART NO.	DESCRIPTION	LIST PRICE	FIG. NO.	PART NO.	DESCRIPTION	LIST PRICE	QTY
	1	110-660	Brake Nut	.70	30	110-689	Bearing Screw	.35	
	2	110-661	Safety Ring	.10	31	110-690	Tension Spring	.15	
	3	110-662	Excenter Wheel	.15	32	110-691	Stop Lever	1.45	
	4	110-663	Brake Disc	.10	33	110-692	Lug Screw	.10	
	5	110-664	Driving Plate	.10	34	110-693	Cover Plate	.85	
	6	110-665	Spring-Washer	.15	35	110-694	Half Round Screw	.10	
	7	110-666	Spool	5.45	36	110-695	Bushing	.15	
	8	110-667	Ratchet	.20	37	110-696	Half Round Screw	.10	
	9	110-668	Tension Spring	.10	38	110-697	Plate	.95	
	10	110-669	Lug Screw	.15	39	110-698	Ball Bearing	1.50	
	11	110-670	Washer	.10	40	110-699	Bushing	.30	
	12	110-671	Axle, Cpl	1.10	41	110-700	Ratchet Wheel	.40	
	13	110-672	Bail Arm Cpl	2.20	42	110-701	Pinion	2.35	
	14	110-673	Bushing	.30	43	110-702	Housing	4.50	
	15	110-674	Line Guide	.60	44	110-703	Guide Piece	.20	
	16	110-675	Washer	.30	45	110-704	Screw	.10	
	17	110-676	Angle Lever	.30	46	110-705	Straight Spring	.15	
	18	110-677	Spring Washer	.10	47	110-706	Stop Lever	.30	
	19	110-678	Plane Nut	.25	48	110-707	Lug Screw	.10	
	20	110-679	Hexagon Nut	.10	49	110-708	Driving Wheel	1.40	
	21	110-680	Driving Plate	.15	50	110-709	Washer	.10	
	22	110-681	Flange	3.60	51	110-710	Cover, Cpl	2.35	
	23	110-682	Changing Spring	.15	52	110-711	Safety Disc	.10	
	24	110-683	Cover	.40	53	110-712	Spring-Washer	.15	
	25	110-684	Case Cover Screw	.10	54	110-713	Lever F. Anti-Reverse Clutch	.40	
	26	110-685	Bearing Screw	.35	55	110-714	Half Round Screw	.10	
	27	110-686	Changing Spring	.15	56	110-715	Crank Arm	2.30	
	28	110-687	Cover	.40	57	110-716	Handle Grip	.35	
	29	110-688	Case Cover Screw	.10	58	110-717	Grip Screw	.10	