


CURADO

CU-200B

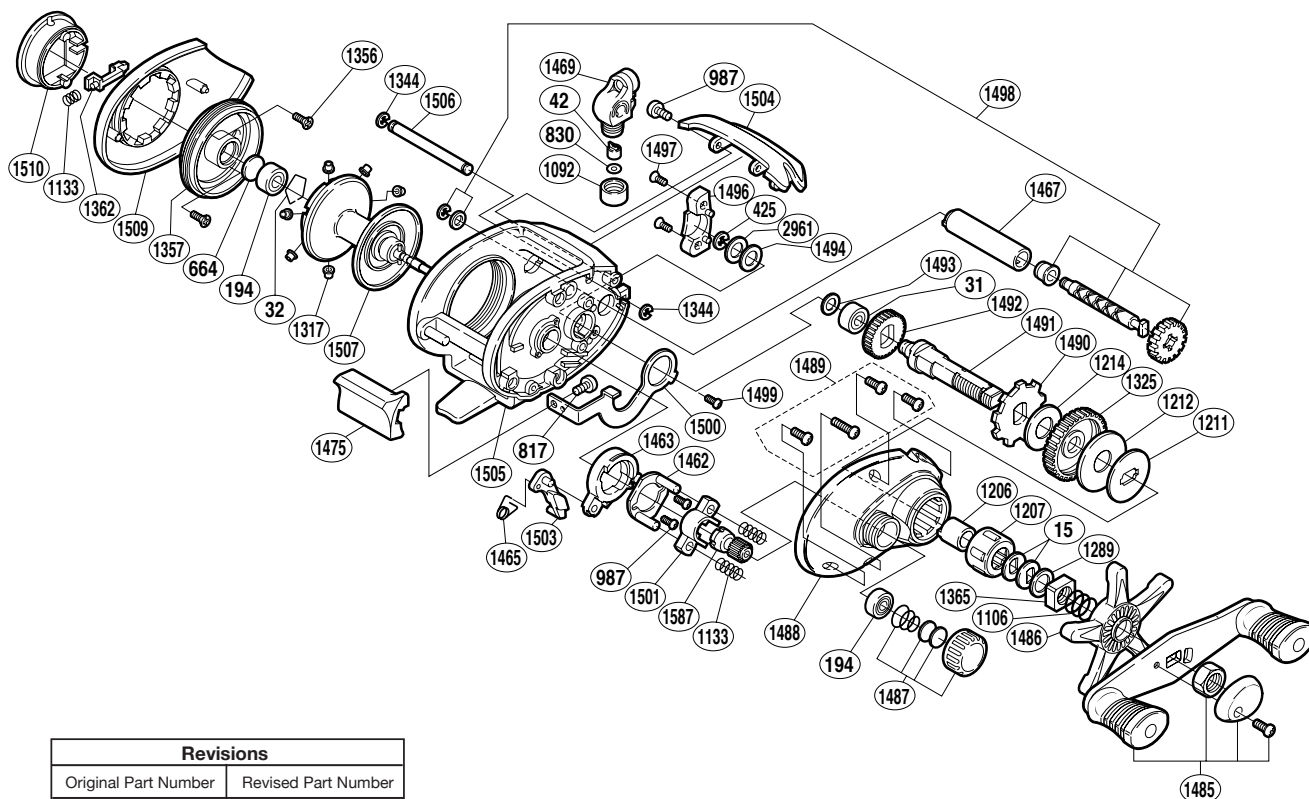

Revisions	
Original Part Number	Revised Part Number
BNT 1495	BNT 2961

Part No.	Description
BNT0015	Drag Spring Washer
BNT0031	Ball Bearing
BNT0032	Bearing Retainer
BNT0042	Line Guide Pawl
BNT0194	Ball Bearing
BNT0425	"E" Lock
BNT0664	Spacer (B)
BNT0817	Clutch Bar Screw
BNT0830	Spacer (optional)
BNT0987	Multi Purpose Screw
BNT1092	Pawl Cap
BNT1106	Star Drag Spring
BNT1133	Yoke / Turnkey Pawl Spring
BNT1206	Roller Clutch Inner Tube
BNT1207	Roller Clutch Bearing
BNT1211	Key Washer
BNT1212	Drag Washer (C)
BNT1214	Drag Washer (A)
BNT1289	Star Drag Spacer

Part No.	Description
BNT1317	Brake Collars (red-6 pieces)
BNT1325	Drive Gear
BNT1344	"C" Lock
BNT1356	Brake Case Retainer Screw
BNT1357	Brake Case
BNT1362	Turnkey Pawl
BNT1365	Star Drag Nut
BNT1462	Clutch Cam Retainer
BNT1463	Clutch Cam
BNT1465	Clutch Pawl Spring
BNT1467	Level Wind Guard
BNT1469	Line Guide
BNT1475	Quick-Fire II Clutch Bar
BNT1485	Handle Assembly
BNT1486	Star Drag
BNT1487	Cast Control Cap Assembly
BNT1488	Right Side Plate
BNT1489	Side Plate Screws
BNT1490	Anti-Reverse Ratchet

Part No.	Description
BNT1491	Drive Shaft
BNT1492	Idle Gear
BNT1493	Drive Gear Washer
BNT1494	Drive Shaft Washer (B)
BNT1496	Drive Shaft Cover
BNT1497	Drive Shaft Cover Screw
BNT1498	Worm Shaft Assembly
BNT1499	Clutch Plate Screw
BNT1500	Clutch Plate
BNT1501	Yoke
BNT1503	Clutch Pawl
BNT1504	Thumb Rest
BNT1505	One-Piece Frame
BNT1506	Line Guard
BNT1507	Spool Assembly
BNT1509	Left Side Plate
BNT1510	Turnkey Dial
BNT1587	Pinion Gear
BNT2961	Drive Shaft Washer