


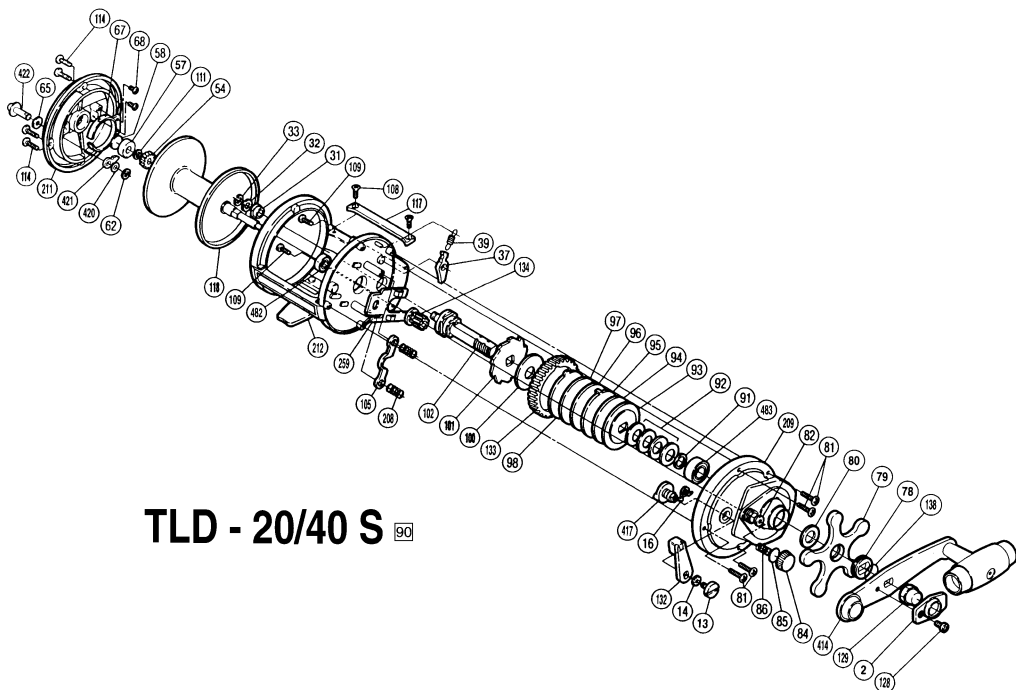

TGT No.	PARTS NAMES	TGT No.	PARTS NAMES	TGT No.	PARTS NAMES
0002	Handle Nut Plate	0082	Spool Shaft Bushing	0117	Line Guard
0013	Clutch Lever Screw	0084	Cast Control Cap	0118	Spool
0014	Lock Washer	0085	Spacer	0128	Handle Nut Plate Screw
0016	Clutch Spring	0086	Spool Tension Spring	0129	Handle Nut
0031	Drive Shaft Bushing	0091	Bearing Thrust Washer	0132	Clutch Lever
0032	Spacer	0092	Drag Spring Washer	0133	Drive Gear
0033	Drive Shaft Retainer	0093	Key Washer "F"	0134	Pinion Gear
0037	Anti-Reverse Pawl	0094	Drag Washer "D"	0138	"O" Ring
0039	Anti-Reverse Pawl Spring	0095	Eared Washer "E"	0208	Yoke Spring
0054	Click Gear	0096	Drag Washer "I"	0209	Right Side Plate
0057	Spool Shaft Bushing "B"	0097	Key Washer "C"	0211	Left Side Plate
0058	Spacer "B"	0098	Eared Washer "B"	0212	Frame
0062	Click Pawl Retainer	0100	Drive Shaft Washer	0259	Yoke Plate
0065	Spacer A	0101	Anti-Reverse Ratchet	0414	Handle Assembly
0067	Click Spring	0102	Drive Shaft	0417	Clutch Cam
0068	Click Spring Screw	0105	Yoke	0420	Spacer B
0078	Handle Washer	0108	Line Guard Screw	0421	Click Pawl
0079	Star Drag	0109	Right Side Plate Screw (B)	0422	Click Button
0080	Star Drag Washer	0111	Click Gear Retainer	0482	Ball Bearing
0081	Right Side Plate Screw (A)	0114	Left Side Plate Screw	0483	Ball Bearing