
### IMPORTANT INSTRUCTION MANUAL

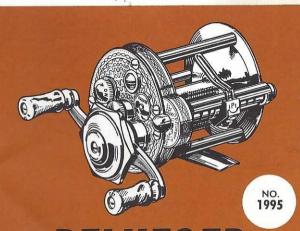

# PFLUEGER FREE SPOOL SUMMIT

AKRON 9, OHIO



Pflueger's new Free Spool Summit Reel enables the caster to make longer casts and use light lures. By using the Free Spool feature, the handle does not rotate during the cast. This is an optional feature to be used at the discretion of the angler. If heavy lures are used, the angler may decide to cast in a conventional manner without using the Free Spool feature.

The star type drag incorporated in this handle enables you to catch larger fish on lighter line, and it prevents losing many fish.



#### Fishable Line Capacity — Yards

Line Test	10	12	15	20	25	30	
Pflueger Tribune Braided Nylon	270	225	175	145	100	90	
Pflueger Merit Monofilament	250	200	160				



On the retrieve, the level wind mechanism winds the line uniformly on the spool so that it will play out smoothly on the next cast. The level wind mechanism is vitally important in a reel of this type. Both the

double thread shaft and pawl or half nut are accurately made of selected steel. In case of any emergency, an EXTRA PAWL is provided and carried in a receptacle built into the cap of the reel. In replacing the pawl it is important THAT THE PAWL BE PROPERLY SEATED IN THE DOUBLE THREAD SHAFT BEFORE REPLACING AND TIGHTENING THE COVER. The Pawl cover requires no adjustment — screw it down tightly when the pawl is in place.

#### ANTI-BACKLASH

This device is operated by an adjusting button on the cap of the reel. By turning this button clockwise, the desired degree of tension can be secured so as to automatically thumb the reel and prevent overrunning of the spool



at the end of a cast. A little experimenting will indicate the proper tension. Begin by using just enough anti-backlash to allow the weight of the lure to pull out line slowly while the rod is held horizontal. The friction shoe in this device is replaceable.

NOTE: Do not use the oil cups as a drag. Tightening them up to where they retard the spinning of the spool causes excess wear on the bearings. Also do not cast with the click on.




equipped with an automatic push button Free Spool mechanism. This push button is located in the center of the Star Drag on the crank. To cast, press in on

push button, in the center of the Star Wheel, placing reel in Free Spool, and cast in the ordinary manner. After the cast, the first revolution of the handle automatically engages the spool and the retrieve is made. The Free Spool feature allows you to make longer casts and to cast lighter lures than ever before.

The Star Drag is tightened by turning it clockwise or away from you. It is loosened by turning it counterclockwise or toward you. The Star Drag may be adjusted while playing the fish or preset before fishing.

## FREE SPOOL SUMMIT

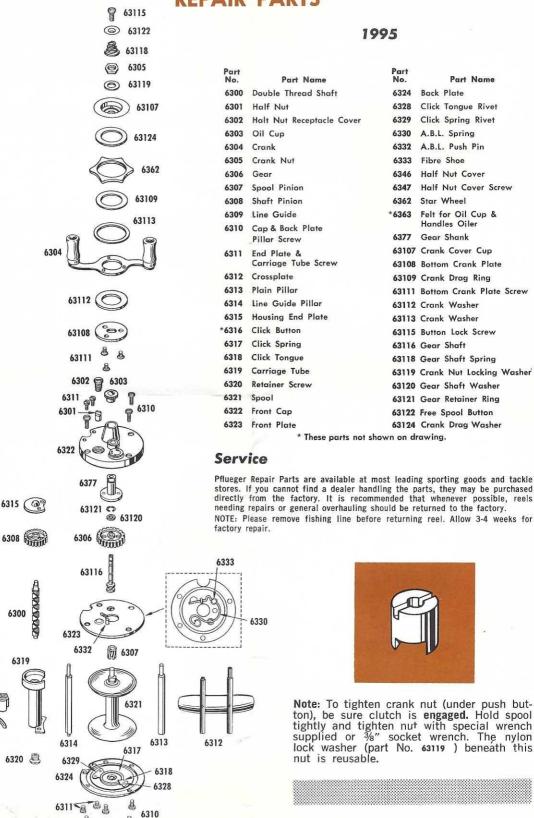

6347 衛