


MR. CRAPPIE® Slab Shaker™

Spinning Reels MCS50

fig 1 To remove side cover unscrew side-plate screws pry front cover away from body to access components

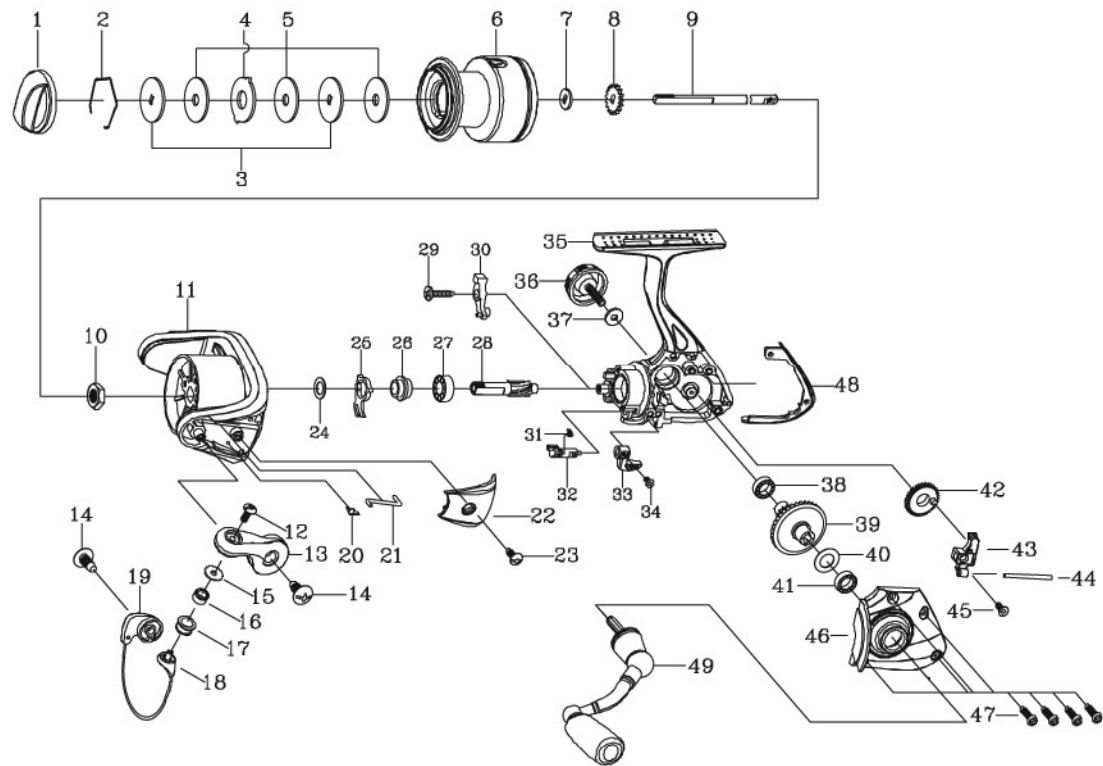

Do Outdoors
3031 N. Martin, Springfield, MO 65803
417-881-5397 www.mrcrappie.com

KEY NO.	PARTS NAME	KEY NO.	PARTS NAME	KEY NO.	PARTS NAME	KEY NO.	PARTS NAME	KEY NO.	PARTS NAME
1	DRAG KNOB ASSEMBLY	11	ROTOR ASSEMBLY	21	BAIL TRIP SHAFT	31	SPRING	41	INSERT METAL
2	DRAG WASHER RETAINER	12	SCREW	22	BAIL SPRING COVER	32	ANTI-REVERSE CAM	42	OSCILLATING GEAR
3	KEY WASHER	13	BAIL ARM	23	SCREW	33	ANTI-REVERSE LEVER	43	OSCILLATING SLIDER
4	EARED WASHER	14	SCREW	24	WASHER	34	SCREW	44	GUIDE PIN
5	WASHER	15	WASHER	25	SPRING HOLDER	35	BODY	45	SCREW
6	SPOOL ASSEMBLY	16	INSERT METAL	26	INSERT METAL	36	HANDLE SCREW CAP	46	BODY COVER
7	WASHER	17	LINE ROLLER	27	BALL BEARING	37	WASHER	47	SCREW
8	CLICK GEAR	18	BAIL ASSEMBLY	28	PINION GEAR	38	BALL BEARING	48	BODY CAP
9	MAIN SHAFT	19	BAIL HOLDER	29	SCREW	39	DRIVE GEAR	49	HANDLE ASSEMBLY
10	ROTOR NUT	20	SPRING	30	ANTI-REVERSE PAWL	40	WASHER		