

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
2110	Worm Shaft Retainer Screw	8226	Line Roller Screw	8322	Adjusting Washer
2296	Support Lock Screw	8227	Protector Screw	8323	Bearing Housing
2298	Spacer	8233	Roller Clutch Water Proof Retainer	8325	Friction Ring
2409	Worm Shaft Spacer	8234	Roller Clutch Water Proof	8326	Gear Cover
3243	Drive Gear Washer	8235	Roller Clutch Reinforce	8327	Idle Gear (B) Collar
3561	Oscillating Pawl Cover Screw	8236	Roller Clutch Assembly	8331	Worm Shaft
3958	Side Cover Screw (D)	8237	Bearing Retainer	8332	Ball Bearing
4777	Multi-Purpose Screw	8238	Adjusting Washer	8334	Flange Water Proof
5808	Bail Arm Washer	8243	Gear Cover Seal	8335	Side Cover
5812*	Bail Arm Screw Collar	8254	Handle Knob Adjust Washer	8336	Oil Shield Cover
5820	Spacer	8258	Worm Bushing	8337	Side Cover Screw (B)
6073	Bearing Spacer	8262	Worm Shaft Ring	8338	Side Cover Screw (A)
6074	Line Roller Bushing	8268	Oil Cap	8339	Handle Shaft Seal
6075	Roller Bearing Seal	8278	Ball Bearing	8340	Handle Shaft Cover (A)
6077	Click Pin	8283	Drag Knob	8341	Disc Spring
6156	Set Screw	8287	Bearing Support	8342	Small Handle Shank Washer
6166	Line Roller	8291	"O" Ring	8343	Handle Shaft Cover (B)
6216	"O" Ring	8292	Bearing Retainer	8344	Handle Shank Assembly
6225	Nut Lock Screw	8293	Eared Washer (B)	8347	Oscillating Slider
6226	Rotor Nut Lock Plate	8294	Drag Washer (B)	8348	Oscillating Guide
6227	Bearing Washer	8295	Spool Drag Disc (A)	8349	Worm Shaft Retainer Washer
6228	Bearing Water Proof	8296	Spool Drag Disc (B)	8350	Worm Shaft Retainer
6229	Rotor Nut	8297	Drag Click Holder Cover	8351	Rear Shield
6236	Bail Arm Screw	8298	Drag Cover	8352	Rear Protector
6266	Oscillating Pawl Cover	8299	Click Spring	8354	Handle Screw Cap
6267	Oscillating Slider Bushing	8300	"O" Ring	8357	Handle Knob (T type B)
6268	Oscillating Pawl	8301	Drag Click Holder	8358	Handle Knob I.D. Plate
6270	Slider Retainer Screw	8303	Bearing Bushing	8361	"C" Lock
6296	Click Spring	8304	Spool Support (A)	8362	Key Washer
7810	Ball Bearing	8305	Spool Support (B)	8363	Drag Washer (A)
7915	Ball Bearing	8306	Ball Bearing	8364	Eared Washer (A)
8035	Ball Bearing	8307	Main Shaft	8365	Spool Assembly
8056	Multi-Purpose Screw	8308	Line Roller Support Collar	8366	Pinion Gear
8132	Bail Trip Cover Spring	8309	Bearing Retainer Ring	8367	Idle Gear (B)
8144	Bearing Retainer Screw	8310	Line Roller Washer	8368	Pinion Worm Gear
8161	Oil Cap	8311	Bail Spring	8369	Idle Gear
8169	Handle Knob Adjust Washer	8312	Bail Spring Seat	8370	Drive Gear
8172	Handle Knob Nut	8313	Trip Lever Guide	8371	Body
8174	Handle Knob Screw	8314	Bail Trip Lever		
8202	Ball Bearing	8315	Bail Trip Cover	8355	Handle Assembly (T type B 10000)
8208	Spool Washer	8316	Bail Arm	8356	Handle Assembly (Round type C 20000)
8210	Spool Support (C)	8317	Bail Spring Cover	8359	Handle Knob Assembly (Round type C)
8211	Bearing Water Proof	8318	Rotor Guard		
8216	Adjusting Washer	8319	Rotor	8345	Spare Handle Knob (Round type C)
8218	Bail Spring Guide (A)	8320	Bail Hold Support Guard	8346	Spare Handle Knob I.D. Plate
8219	Spring Guide (A) Support	8321	Bail Assembly	8360	Line Band (LLL)